



# MiniTech

## User instructions

### Default codes

<b>Master</b>	1 2 3 4 5 6 7 8	
<b>Manager</b>	0 1 - 1 2 3 4 5 6 +	Optional Dallas key
<b>User 2</b>	0 2 - 0 2 0 2 0 2 +	Optional Dallas key
<b>User 3</b>	0 3 - 0 3 0 3 0 3 +	Optional Dallas key
<b>User x</b>	x x - x x x x x x +	Optional Dallas key

### Dallas key

In the event that the user is composed of "code + Dallas key", before or after entering the code, the Dallas key must be placed on the appropriate Dallas key reader.

### Override users

Override users open without waiting the time delay. In the default programming they are set in dual code opening but, upon request, the single opening mode can also be set.

### Silent alarm

It is activated by increasing or decreasing the last digit by one number when entering the opening code.

### Penalty

After four attempts to enter an incorrect code, the lock starts a 4-minute delay period. Each attempt to enter the code within the 4 minutes delay period restarts the count.

### Low battery warning

A message on the display and a long beep during opening indicates a low battery level. Replace immediately the low battery with a new Alkaline battery.

### Sound signals

A double beep **🔔🔔** normally indicates a correct operation. A long beep **🔔🔔🔔🔔** indicates an incorrect operation and the end of the operation itself.

### Reccomendations

Do not use easily identifiable codes such as 123456, dates of birth or other personal information.

### Opening (It is recommended to change the factory code before use and to safely store the new code)

Press any key to turn on the device. The display shows the message:

USER CODE X X - X X X X X X
TIME DELAY 00:59
OPEN WINDOW 00:01
OPEN

Enter the opening code. The display shows the time delay counting if programmed.

At the end of the time delay, the display shows the counting of the open window.

Enter the opening code. The display shows the message:

Open the safe door within 4 seconds.

### Dual code opening (It is recommended to change the factory code before use and to safely store the new code)

Press any key to turn on the device. The display shows the message:

USER CODE X X - X X X X X X
TIME DELAY 00:59
OPEN WINDOW 00:01
2° USER CODE X X - X X X X X X
OPEN WINDOW

Enter the opening code. The display shows the time delay counting if programmed.

At the end of the time delay, the display shows the counting of the open window.

Enter the 1° opening code. The display shows the message:

Enter the 2° opening code. The display shows the message:

Open the safe door within 4 seconds.

### Change code ( Safely store the new code and perform various opening / closing tests before closing the safe door )

To be performed with the door open!

Press and hold **0**. The display shows the message:

Enter the **old code**. The display shows the message:

Enter the **new code**. The display shows the message:

Confirm the **new code**.

OLD CODE X X - X X X X X X
NEW CODE X X X X X X
CONFIRM CODE X X X X X X
OPERATION DONE

Perform various opening / closing tests before closing the safe door.

**Users management**

Press and hold **1**. The display shows the message:  
Enter the Manager code.

Press **→** to scroll the list or enter the user ID.

"✓" installed user, "X" deleted user, "\_" disabled user.

The override users (50 – 59) can be installed only when the lock is open.

Press **✓**. If the user is not installed, the display shows the message:

Press **✓** to confirm, or **→** to disable/enable/delete and **✓** to confirm.

**Membrane test**

Press any key to turn on the device.

Press and hold the button **5**. The display shows the message:

Press in sequence the buttons shown in the display.

A confirmation beep is given for each pushed key working properly.

A damaged key is indicated with a long beep. The display shows the message:

**Change date and time**

Press (or press and hold) **✓**. The display shows the message:  
Enter the Master code. The display shows the message:

Press **✓**. The display shows the date and time currently set:

To modify, press **✓**. The display shows the message:

Enter time and date and press **✓** to confirm.

**Block system**

Press and hold **4**. The display shows the message:

Enter the code authorized for the block operations. The display shows the message:

Enter reopening date and time (max. 31 days).

Press **✓** to confirm. The display shows the message:

Press **✓** to confirm. The display shows the message:

**Further information**

For the complete manual and further information on the product's features, please visit [www.tecnosicurezza.it](http://www.tecnosicurezza.it)

USERS MANAGEMENT  
0 1 – X X X X X X

02 03 04 05 06  
✓ X \_ \_ ✓

02  
INSTALL?

MEMBRANE TEST  
1234567890 + ✓

MEMBRANE TEST  
1234567890 + ✓

WRONG/FAULTY  
KEY

MENU MASTER  
X X X X X X X X

TIME AND DATE  
SETTINGS

12:00 WED  
13 /02/2019

hh:mm \_ \_ \_ \_  
DD/MM/YYYY

BLOCK SYSTEM  
X X - X X X X X X

BLOCK UNTIL  
DD/MM hh:mm

BLOCK UNTIL  
13/02 12:00

BLOCK THE LOCK?

LOCK  
BLOCKED

GLOBAL HEADQUARTERS  
Tecnosicurezza SpA  
Via Cesare Battisti. 276  
37057 San Giovanni Lupatoto  
Verona  
Tel.+39 045 826 64 70  
Fax. +39 045 826 64 69  
info@tecnosicurezza.it

USA HEADQUARTERS  
Tecnosicurezza Inc.  
50, Thomas Lane  
Versailles, KY 40383  
Tel.+1 859 490 89 30  
info@usatecno.com

SPAIN HEADQUARTERS  
Tecnosicurezza Sa  
C/Menor, 4 - Nave 10  
Pol. Ind La Mina 28770  
Colmenar Viejo  
Tel.+34 91 804 33 91  
Fax.+34 91 804 32 63  
info@tecnosicurezza.es

