

# TechMaster

## User Instructions



**Table of contents**

<b>TABLE OF CONTENTS</b>	<b>2</b>
<b>IMPORTANT NOTES!</b>	<b>4</b>
<b>GENERAL INFORMATION</b>	<b>5</b>
<b>OVERVIEW FUNCTIONS</b>	<b>8</b>
<b>OPENING THE LOCKS</b>	<b>9</b>
USERS (OR OVERRIDE USERS): OPENING WITHOUT TIME DELAY	9
USERS: OPENING WITH TIME DELAY	9
MANAGER (OR OVERRIDE MANAGER): OPENING WITHOUT TIME DELAY	10
MANAGER (OR OVERRIDE MANAGER): OPENING WITH TIME DELAY	10
OPENING WITH DYNAMIC CODES (DALLAS KEY OPTION)	10
OPENING WITH DYNAMIC CODES (PIN OPTION)	11
DUAL MODE OPENING WITHOUT TIME DELAY	11
DUAL MODE OPENING WITH TIME DELAY	11
<b>MASTER MENU</b>	<b>12</b>
TIME & DATE SETTINGS	12
TIME AND DATE RECOVERY THROUGH DYAMAWEB (OTC SOFTWARE)	12
TIME LOCK SETTINGS	13
WEEKLY TIME LOCK SETTINGS – ADDING NEW VALUES	13
WEEKLY TIME LOCK SETTINGS – VERIFY OR DELETE VALUES	14
CLOSING PERIODS (HOLIDAYS) – ADD NEW VALUES	14
OPENING PERIODS - ADD NEW VALUES	15
OPENING PERIODS - VERIFY OR DELETE VALUES	16
PC CONNECTION	16
MANAGER MANAGEMENT	16
DYNAMIC CODES – ENABLING/DISABLING	17
DYNAMIC CODES ACTIVATION WITH STATIC CODES DELETING	17
<b>MANAGER MENU</b>	<b>18</b>
USERS MANAGEMENT	18
TIME DELAY	18
VARIABLE TIME DELAY – ADDING NEW VALUES	19
VARIABLE TIME DELAY – VERIFY OR DELETE VALUES	19
PC CONNECTION	19
<b>OVERRIDE MANAGER MENU</b>	<b>20</b>
OVERRIDE USERS MANAGEMENT	20
<b>CODE CHANGING</b>	<b>20</b>
CHANGE CODE FOR STANDARD AND OVERRIDE USERS	20
CHANGE CODE FOR MANAGER	21
CHANGE CODE FOR OVERRIDE MANAGER	21
CHANGE CODE FOR MASTER	21

# TechMaster

<b>TIME MENU</b>	<b>22</b>
OPENING EXTENSION	22
IMMEDIATE TIME LOCK	22
<b>CONFIGURATION MENU</b>	<b>22</b>
INSTALL LOCKS	22
REMOVE LOCKS	23
LOCK RECLOSURE MODE	23
INSTALL I/O INTERFACE	24
CONFIGURE I/O INTERFACE	24
REMOVE I/O INTERFACE	24
DISPLAY CONTRAST	25
KEYPAD LANGUAGE	25
MEMBRANE TEST	26
SYSTEM INFO	26
DYNAMIC KEYPAD ID AND DYAMAWEB SOFTWARE LICENSE	26
<b>CORRECT DISPOSAL OF THIS PRODUCT:</b>	<b>28</b>
<b>(WASTE ELECTRICAL &amp; ELECTRONIC EQUIPMENT)</b>	<b>28</b>
<b>CONTACTS</b>	<b>28</b>

**Important notes!**

- Before installing this product, please carefully read the installation and operating instructions.
- Locks have been designed to correctly operate in a temperature range from -5°C (23°F) to + 50°C (122°F) and in an environment with non-condensing humidity between 25% and 90%.
- The lock must not be oiled/lubricated/greased.
- If installed in normal domestic or office environments, the locks do not require maintenance; in any case, after 10,000 opening/locking cycles, it is recommended to conduct a test that verifies the correct and complete operation of the product.  
Use only DURACELL™ 9 Volt Alkaline batteries, or battery holders with DURACELL™ 1.5 Volt Alkaline batteries. Alternatively, it is possible to use a 12VDC - 1A power adapter (p.n. N1212) with relative power supply interface (p.n. T6006). The power adapter must be compliant with national product regulations and provided with short circuit protection.
- A long beep together with the message “LOW BATTERY” on the display, indicate a low battery level which needs to be immediately replaced.
- It is strongly recommended to change the default codes before use and to keep safely the new codes.
- Never use codes that can be easily guessed such as 123456, birth dates or based on other personal information.
- After changing a code, perform several opening/closing tests before closing the door. Furthermore, after reclosing ensure that the door handle cannot be turned towards the open position (handle locked), in order to confirm the secure locking of lock bolt.

**Should the lock label be removed, warranty is void.**

# TechMaster

## General information

### Using your keypad


- Press any button to power up the keypad. LCD which displays:


ENTER CODE  
X X – X X X X X

If more locks are installed, LCD displays:  
Enter the lock number to select it.

SELECT LOCK

- To enter a code, power up the LCD and enter the corresponding digits.
- LCD automatically switches OFF if no buttons are pressed within 30s.

- To scroll the menu, press .

- To confirm an operation or enter a menu press .

- To leave a menu and come back to the main menu, scroll the functions until "EXIT?" and press OK.



- To enter a code plus Dallas key (if programmed), enter the code digits and insert the Dallas key in the keypad reader.

- To enter a user provided with Dallas key only (if programmed), insert the Dallas key in the keypad reader. LCD displays:


DALLAS USER  
XX

- To start a time delay counting (if programmed), enter a code. LCD displays:

TIME DELAY  
00:59

- To stop a time delay counting (if programmed), press  and then confirm with .

STOP DELAY  
COUNTING?

After time delay counting, LCD displays open window counting:  
Press  and enter a code for opening.

OPEN WINDOW  
00:01

- If a wrong code is entered, LCD displays the message:

WRONG CODE

- If a wrong dynamic/activation code is entered, LCD displays the message:

WRONG DYNAMIC  
CODE

## User instructions

## TechMaster

- If a dynamic/activation code is entered more than 30 minutes before its beginning validity time, LCD displays:
- If a dynamic/activation code is entered more than 30 minutes later than its beginning validity time, LCD displays:
- To open or access the menu in dual mode (if programmed), enter the first code. LCD displays:  
Then, enter the second code.

WRONG DYNAMIC  
CODE

WRONG DYNAMIC  
CODE

ENTER 2° CODE  
X X – X X X X X

### Using your Keypad in Scramble mode (required for class C)

Scramble mode is an additional security which allows to enter a code without using always the same keys. User ID instead can still be entered as well as the Configuration menu code  
To enter an opening code or a menu code in scramble mode, follow the steps below:

Enter the user ID. LCD displays:

ENTER CODE  
[5] x x x x x x

Enter the user code by pressing key **1** or **6**, respectively to increase or decrease by 1 the digit selected ([X]). Press **OK** to confirm and to switch to the next digit. All digits already entered are indicated by capital symbol.

ENTER CODE  
X X X X X [8] x x

After entering the last digit, press **OK** to confirm the code.

Press **→** to come back to the previous digit. When the first digit is selected, press **→** again to enter again the user ID.


### Shortcuts

Press and hold for 2 seconds the button related to the needed function:



- 0** = Change Manager code (01), users, override users, Master and Manager ovr (if configured)
- 1** = PIN entering for dynamic codes (after dynamic codes activation)
- 5** = Test mode

## TechMaster

 = System info and time and date info

 = Exit and back to the main menu

 = Master menu

### User properties and default codes

Users can be programmed for opening with code only, code + Dallas key or with Dallas key only. It is also possible to set a dual mode opening: in this case, entering the two users codes is required to open the lock.

Default codes are:

Master: 1-2-3-4-5-6-7-8.

Manager: 123456.

Users from 02 to 90: 02-020202, 03-030303, and so on. They always open with time delay if programmed.

Override users: through to the setup software, it is possible to configure users in between 10 and 90 (10-101010, 11-111111, and so on) as override users. They always open without time delay.

For class C, all users codes, including Master and Manager, are 8-digits type.

Users from 02 to 90 and Override users have a default code such as 02-02020202, 03-03030303, and so on.

The table below reports the functions for the main users.

#### Master

Access to Master Menu  
Set time and date  
Set Time Lock periods  
Audit download  
Manager Management  
Enable/disable OTCs  
Change code  
PC Link

#### Override manager

Access to Ovr. Manager menu  
Override users management  
Code changing

#### Manager

Access to Manager Menu  
Standard users management  
Override users management  
Set time delay  
Set variable time delay  
PC Link  
Audit download  
Opening  
Code changing  
Set opening extension  
Set immediate time lock

#### Configuration menu

Install/remove locks  
Set display contrast  
Change language  
Test mode  
Check system Information

**Override users**

Opening  
Change code


**Standard users**

Opening  
Set opening extension, if enabled  
Set immediate time lock, if enabled  
Code changing

This user manual describes the standard programming. According to such programming and unless different requests made while ordering the product, an opening can be performed by entering single users codes (no dual mode) and without time delay. Thus, the user manual must be adapted according the configuration selected.

It is strongly recommended to change the default codes before using the lock.

**Overview functions****Lock opening**

After entering an opening code, it is possible to open the lock within 3 seconds. It's no necessary instead with motorized locks: in this case indeed, the motor moves the bolt which remains in opening position for about 8 seconds before returning in closing position. In the manual closing version instead, the bolt can be closed by pressing  key for few seconds.

**Penalty**

Four consecutive wrong codes initiate a four-minutes penalty time. During this period, LCD displays the message "PENALTY" and no operation is allowed.  
For class C, the minimum penalty time is of 5 minutes.

**Time Delay**

Programmable time delay in between 0 and 99 minutes. Programmable opening window in between 1 and 19 minutes.

**Dallas keys**

It can be programmed for any lock. Available as option for Manager and users (not for Master). TechMaster keypad only works with Dallas keys created by TECNOSICUREZZA. Upon express request, the keypad can be set in order to work also with different Dallas key models.

**Power supply**

Lock can be powered with:

- an ALKALINE 9V battery located in the battery compartment below the keypad;
- an internal battery box provided by Tecnosicurezza (6 ALKALINE 1.5 batteries);
- A power adapter (ref. N1212) with power supply interface (ref. T6005/W or T6005) both provided by Tecnosicurezza.



## TechMaster

### Low battery warning

A long beep together with the message "LOW BATTERY" on the display, indicates a low battery level which should be immediately replaced.

### Silent alarm

With this function enabled, enter an opening code increasing or decreasing by one number the last code digit (ex. 03-030304 or 03-030302 instead of 03-030303): the lock opens and simultaneously the output of the alarm interface or I/O interface is activated.

### Tamper alarm (required for class C)

This function provides a blocking of the system and displays a warning message "ANTI\_TAMPER ALARM" whenever the keypad is removed from the door, or the battery compartment get opened. Insert a valid code to unblock the keypad and restore the normal functioning.

### Audit

The lock saves the last 6000 operations with time, date, user and operations description. The keypad can save the last 250 operations. It is possible to download the events for locks and keypad by using the Tecnosicurezza DMT Audit software. For further information refer to the IU\_DMT\_Audit\_XX.

#### IMPORTANT

Some options/characteristics reported in this user manual, can only be used if previously programmed through the setup software. Therefore, please refer to the user manual IU\_TechMaster\_setup\_XX. Please contact Tecnosicurezza for further information.

## Opening the locks

### Users (or Override users): opening without time delay

Power up the keypad. Enter an opening code and insert the Dallas key, if programmed. LCD displays:

Open the lock within 3 seconds.

OPEN

### Users: opening with time delay

Power up the keypad. Enter an opening code and insert the Dallas key, if programmed. LCD displays the time delay counting:

LCD displays the time delay counting:

At time elapsed, the LCD displays the open window counting time.

TIME DELAY  
00:59

OPEN WINDOW  
00:01

Press , LCD displays:


ENTER CODE  
X X - X X X X X X

Enter an opening code and insert the Dallas key, if programmed. LCD displays:

OPEN

Open the lock within 3 seconds.

### Manager (or Override Manager): opening without time delay

Power up the keypad. Press  for opening with Manager code or press it two times for opening with Manager Ovr code. LCD displays:

Enter Manager code and insert the Dallas key, if programmed (or enter Manager Ovr code and insert the Dallas key, if programmed). LCD displays:

Open the lock within 3 seconds.

MANAGER CODE  
X X X X X

OPEN


### Manager (or Override Manager): opening with time delay

Power up the keypad. Press  for opening with Manager code or press it two times for opening with Manager Ovr Code. LCD displays:

Enter Manager code and insert the Dallas key, if programmed (or enter Manager Ovr Code and insert the Dallas key, if programmed). LCD displays the time delay counting:

Once the time delay has elapsed, the LCD displays the open window counting time.

Press , LCD displays:

Press  for opening with Manager code or press it two times for opening with Manager Ovr code. LCD displays:

Enter Manager code/Manager Ovr code and insert the Dallas key, if programmed. LCD displays:

Open the lock within 3 seconds.

MANAGER CODE  
X X X X X

TIME DELAY  
00:59

OPEN WINDOW  
00:01


ENTER CODE  
X X - X X X X

MANAGER  
X X X X X

OPEN

### Opening with dynamic codes (Dallas key option)

Power up the keypad. Insert the Dallas dynamic key in the Dallas reader. LCD displays:

Enter the dynamic code and press . LCD displays:

Open the lock within 3 seconds.

If programmed by the software Dyama or DyamaWeb for dynamic codes creation, LCD displays the closing code when the bolt re-closes. Please refer to the user manuals IU\_Dyama\_XX or IU\_DyamaWeb\_XX for further information.

**WARNING:** dynamic codes must be used respecting the **sequence of activation time** in which they have been created by the software (Dyama or DyamaWeb), otherwise the last created code deletes all the previous ones (i.e. if three codes are created and the third one is used before using the first two ones, those first two codes are deleted). In this case indeed LCD displays:

DYNAMIC CODE  
X X X X X X X


OPEN

CLOSING CODE  
179

DYNAMIC CODE  
DELETED

## TechMaster


### Opening with dynamic codes (PIN option)

Power up the keypad. Press and hold  to enter the dynamic user PIN (optional). LCD displays:

DYNAMIC USER  
X X X X

Enter the dynamic user PIN. LCD displays:

DYNAMIC CODE  
X X X X X X X X

Enter the dynamic code and press . LCD displays:

OPEN

Open the lock within 3 seconds.

If programmed by the software Dyama or DyamaWeb for dynamic codes creation, LCD displays the closing code when the bolt re-closes. Please refer to the user manuals IU\_Dyama\_XX or IU\_DyamaWeb\_XX for further information.

CLOSING CODE  
179

**WARNING:** dynamic codes must be used within the **activation time** created by the software (Dyama or DyamaWeb), otherwise the last created code deletes all the previous ones (i.e. if three codes are created and the third one is used before using the first two ones, those first two codes are deleted). In this case indeed LCD displays:

DYNAMIC CODE  
DELETED

### Dual mode opening without time delay

Power up the keypad. Enter an opening code and insert the Dallas key, if programmed. LCD displays:

2° USER CODE  
X X - X X X X X X

Enter the second opening code and insert the Dallas key, if programmed.

LCD displays:

OPEN

Open the lock within 3 seconds.

### Dual mode opening with time delay

Power up the keypad. Enter an opening code and insert the Dallas key, if programmed.

LCD displays the time delay counting:

TIME DELAY  
00:59

When the time delay has elapsed, the LCD displays the open window counting time.

OPEN WINDOW  
00:01

Press , LCD displays:

ENTER CODE  
X X - X X X X X X

Enter an opening code and insert the Dallas key, if programmed. LCD displays:

2° USER CODE  
X X - X X X X X X


Enter the second opening code and insert the Dallas key, if programmed.

LCD displays:

OPEN

Open the lock within 3 seconds.

## Master menu

Power up the keypad. Press and hold . LCD displays:


MASTER MENU  
X X X X X X X

Enter Master code (default value 1-2-3-4-5-6-7-8).


### Time & date settings

Enter the Master menu. Press  until LCD displays:

TIME AND me  
SETTINGS

Press . LCD displays the current time and date.

08:00 FRI  
27/01/2006


Press  to change time and date.

hh:mm \_ \_ \_ \_  
GG / MM / YYYY

Enter the new time and date values and press  to confirm.

### Time and Date recovery through DyamaWeb (OTC software)

This option can only be performed after activating the dynamic codes and the deletion of all static codes (including the Master code). For further information, see the paragraph **Dynamic codes activation with static codes deleting**, pg. 18. This option allows for the updating of the time and date values by using the keypad along with the DyamaWeb software. (for further information, see user manual IU\_DyamaWeb\_XX or IU\_DyamaWebLite\_XX).

Power up the keypad and press and hold  until the keypad firmware version is displayed.

Press  until the LCD displays the current time and date.

08:00 FRI  
01/27/2006

Press and hold . LCD displays:

TIME/DATE ERROR  
MODE ACTIVATED!

Insert the blue Dallas key N1971 in the reader. LCD displays:



TIME/DATE ERROR  
XXXX XXXX

Enter the 8-digits code displayed on the LCD into DyamaWeb software, to generate the dynamic code to access the Time & Date menu, to update time and date values.

Press . LCD displays:

DYNAMIC CODE  
XXX XXX XXX


Enter the dynamic code generated by DyamaWeb software: LCD displays the current values for time and date.

Press  to enter the new time and date values and press  to confirm.

### DST Settings

## TechMaster

**WARNING:** it is recommended to enter this menu always with the door open.

Power up the keypad. Enter the Master menu. Press  until LCD displays:

AUTOMATIC DST


Press  one time and then press  to select between *ON* and *OFF*.  
Press  again to confirm.

If the static codes have been deleted, automatic DST can be enabled by using the dynamic user DST.

### Time Lock settings


**WARNING:**

It is recommended to enter this menu always with the door open;  
Master menu, allows to add/delete the settings for time lock/closing periods/opening periods, only if current time and date values are included in an opening period.



Power up the keypad. Enter the Master menu. Press  until LCD displays:

TIME LOCK  
SETTING

#### Weekly time lock settings – Adding new values


Enter Time Lock menu and press . LCD displays:



WEEKLY TIME LOCK  
T1 SETTING

Press  once or two times to set a weekly time lock T2 or T3. Then, press .




Press . LCD displays:

ADD NEW VALUES


Press . LCD displays the current day of the week.

 hh:mm FRI  
 hh:mm


The first entry is an opening time while the second entry is a closing time. Enter the new values.

Press  to confirm. LCD displays the next day of the week, proposing the same time values. Press  to confirm or  to select another day without entering new time values or else enter the new time values as previously illustrated.

At the end of the week, LCD displays:

END OF LIST  
EXIT AND SAVE? 


Press  to save or  for coming back to the first weekday.

All values entered can be saved only by pressing .

Inside the Time Lock menu, opening time intervals are indicated: it means the safe can be opened by entering a valid code, but only inside the time interval itself (ex. opening time


interval from 08.00 to 14.00 from Monday to Friday: the safe can be only opened from 08.00 to 14.00 and only in those days, it cannot be opened before 08.00 and after 14.00. Furthermore, safe cannot be opened on Saturdays and Sundays). It is possible to schedule up to four times intervals per day (ex. Monday from 07.00 to 10.00, from 12.00 to 13.00, 15.00 to 16.00 and 18.00 to 19.00).


### Weekly time lock settings – Verify or delete values


Enter Time Lock menu and press . LCD displays:

Press . LCD displays:


Press . LCD displays:

Press . LCD displays the values for the first day.

Press  to scroll all the schedules list.

Press  on a schedule. LCD displays:



Press  to confirm or  to exit.

At the end of the list, press . LCD displays:

WEEKLY TIME LOCK  
T1 SETTING

ADD NEW VALUES

VERIFY OR DELETE  
VALUES

 hh:mm FRI  
 hh:mm

DELETE VALUES?  
✓


END OF LIST  
EXIT?

### Closing periods (Holidays) – Add new values

Closing periods are time intervals in which is possible to close the lock even when a time lock is enabled.

It is possible to schedule up to 60 closing periods (they can be opening or closing periods). Each period has a maximum time length of 14 days.

WARNING: during closing periods, the safe cannot be opened.


Enter Time Lock menu and press  until LCD displays:

Press . LCD displays:


Press . LCD displays:

Press . LCD displays:

The first entry is a closing time while second entry is an opening time.

Enter the time of start and the ending time for the closing period, then press  to confirm.



*Should the year be programmed*, the closing period is not repeated.

*Should not the year be programmed* (press ) , the closing period is yearly repeated instead.

WEEKLY TIME LOCK  
T1 SETTING

CLOSING PERIODS  
SETTING

ADD NEW VALUES


 GG/MM/AA hh:mm  
 GG/MM/AA hh:mm


## TechMaster

Press  to delete all values entered.

Repeat the steps above for each closing period.

### Closing periods (OFF days) – Verify or delete values


Enter Time Lock menu and press . LCD displays:


Press  until the LCD displays:

Press . LCD displays:


Press . LCD displays:

Press  to check the first closing period scheduled.

Press  to scroll all the scheduled closing periods.

Press  to delete the scheduled closing periods.

Press  to confirm or  to exit.

At the end of the list, press .

WEEKLY TIME LOCK  
T1 SETTING

CLOSING PERIODS  
SETTINGS

ADD NEW VALUES

VERIFY OR DELETE  
VALUES

⌚ GG/MM/AA hh:mm  
⌚ GG/MM/AA hh:mm


DELETE VALUES?  
✓


END OF LIST  
EXIT?

### Opening periods - Add new values

Opening periods are time intervals in which is possible to open the lock even when a time lock is enabled.

It is possible to schedule up to 60 closing periods (they can be opening or closing periods). Each period has a maximum time length of 14 days.


Enter Time Lock menu and press . LCD displays:

Press  until the LCD displays:


Press . LCD displays:

Press . LCD displays:

The first entry is an opening time while the second entry is a closing time.

Enter a date and time for opening and closing, then press  to confirm.

*Should the year be programmed*, the opening period is not repeated.


*Should not the year be programmed* (press ) , the opening period is yearly repeated instead.

WEEKLY TIME LOCK  
T1 SETTING


OPENING PERIODS  
SETTINGS


ADD NEW VALUES

⌚ GG/MM/AA hh:mm  
⌚ GG/MM/AA hh:mm

Press  to delete the values entered.


### Opening periods - Verify or delete values


Enter Time Lock menu and press . LCD displays:

Press  until the LCD displays:

Press . LCD displays:


Press . LCD displays:

Press . LCD displays the first opening period.

Press  to scroll all the scheduled opening periods.

Press  to delete. LCD displays:

Press  to confirm or  to exit.

At the end of the list, press .

WEEKLY TIME LOCK  
T1 SETTING

OPENING PERIODS  
SETTINGS

ADD NEW VALUES

VERIFY OR DELETE  
VALUES


GG/MM/AA hh:mm  
GG/MM/AA hh:mm


DELETE VALUES?  
✓


END OF LIST  
EXIT?

### PC connection

Use this function to enable the connection between the keypad and PC.

Power up the keypad. Enter the Master menu. Press  until LCD displays:

Press  to start the connection with PC.


Press  to stop the connection with PC.

If the static codes have been deleted, PC connection can be enabled by using the dynamic user AUDIT.

PC LINK

PC LINK  
...

### Manager Management

Power up the keypad. Enter Master menu. Press  until the LCD displays:

Press . LCD displays:


MANAGER  
MANAGEMENT

1 MANAGER ✓  
2 AMMINISTRAT. ✓


“✓” installed, “\_” deleted, “X” disabled.





## TechMaster

Select Manager by entering its reference number and press .  
If the Manager is not installed, LCD displays:

01  
INSTALL?


Press  to confirm. Then enter the new Manager code and confirm it. LCD displays:

OPERATION DONE

If the Manager is already installed, press  for disabling/deleting/installing it. Then press  to confirm.

### Dynamic codes – Enabling/Disabling

**WARNING:** it is recommended to always perform this operation with door open, to enable/disable the dynamic codes. Later, dynamic codes can be activated through the red Dallas key 1971 previously programmed with the software Dyama or DyamaWeb.

Power up the keypad. Enter Master menu. Press  until the LCD displays:

DYNAMIC CODES

Press . LCD displays:

DYNAMIC CODES  
ENABLED/DISABLED

Press . The LCD displays:

DYNAMIC CODES  
ENABLE/DISABLE?

Press  to confirm. LCD displays:


OPERATION DONE

### Dynamic codes activation with static codes deleting

**WARNING:** with this operation, it is possible to delete the static codes for all users and Manager. Furthermore, depending on the configuration selected, Master static code may be deleted as well.

Insert the red Dallas key N1971 in the reader. LCD displays:

DYNAMIC CODE  
XXX

Enter the activation code generated by the software Dyama or DyamaWeb and press . LCD displays:

DELETE ALL THE  
STATIC CODES?

Press . LCD displays:

OPERATION IN  
PROGRESS...

Once completed, LCD displays:

DYNAMIC CODES  
ACTIVE

To re-install the static codes (only for Master and Manager) use the dynamic user REMOVAL. Later, it is possible to re-install all the other users from the menu *Users management*.


## Manager menu

Power up the keypad.



Press , then press . LCD displays:

MANAGER MENU  
X X

### Users Management

Power up the keypad. Enter Manager menu and press  until LCD displays:


USERS MANAGEMENT

Press  and press  to scroll users list or enter user ID.

02 03 04 05 06  
✓ x \_ \_ ✓



“✓” user installed, “\_” user deleted, “X” user disabled.

Override users 50 ÷ 59 can only be installed when the lock is open.


Press . If the user is not installed LCD displays:

02  
INSTALL?

“E” Dallas key, “1 2” code, “+” dual mode, “TL” time lock


Press  to confirm or  to exit or for switching to the next user.

Enter the new user code and confirm it.


If the selected user is already installed, press  to choose whether to disable it, to delete it or for leaving and selecting another user.

Press  to confirm the choice.

### Time delay

Power up the keypad. Enter Manager menu and press  until LCD displays:

T. DELAY AND  
O. WINDOW

Press  to confirm. LCD displays the current values for time delay and open window.

TIME DELAY 00  
OPEN WINDOW 01

Press  to exit or  to program new values.

TIME DELAY mm  
OPEN WINDOW mm

Enter the new values and press  to confirm. LCD displays:

VALUES UPDATED

Time delay can be programmed between 0 and 99 minutes, the open window can be programmed between 1 and 19 minutes instead.


To program a shorter time delay, lock must be open.

### Variable Time Delay

WARNING: lock must always be open to set a variable time delay

VARIABLE  
TIME DELAY


## TechMaster




Power up the keypad. Enter Manager menu and press  until LCD displays:

### Variable Time Delay – Adding new values

Enter Variable Time Delay menu and press . LCD displays:

ADD NEW VALUES


Press . LCD displays the current day of the week.



 hh:mm VEN  
 hh:mm :mm

Enter values for starting time and ending time in which Variable Time Delay must be active and then enter the values of Variable Time Delay.

Press  to confirm. LCD displays the next day of the week, proposing the same time values. Press  to confirm or  to select another day without entering new time values or otherwise enter the new time values as previously illustrated.

At the end of the week, LCD displays:

END OF LIST  
EXIT AND SAVE? 


Press  to save the values or  for coming back to the first weekday.

After saving the values, LCD displays:


ADD NEW VALUES




Press  to set new values (max. 4)


### Variable Time Delay – Verify or delete values

Enter Variable Time Delay menu and press  until LCD displays:

VERIFY OR DELETE  
VALUES



Press . LCD displays the values for the first day.


 08:00 DOM  
 10:00 :01


Press  to scroll all the schedules list.

Press  on a schedule. LCD displays:

DELETE VALUES?  



Press  to confirm the deletion or  to exit.

At the end of the list, press . LCD displays:


END OF LIST EXIT  
AND SAVE? 

### PC connection

Use this function to enable the connection between the keypad and PC.

Power up the keypad. Enter the Manager menu. Press  until LCD displays:


PC LINK

Press  to start the connection with PC.

PC LINK  
...

## User instructions

## TechMaster

Press  to stop the connection with PC.

If the static codes have been deleted, PC connection can be enabled by using the dynamic user AUDIT.

### Override Manager menu

Power up the keypad.


Press , then press  until LCD displays:

Enter OVR Manager code (default code 6-5-4-3-2-1).

OVR MANAGER MENU  
X X X X X X

### Override Users management

WARNING: to install new override users, lock must be open.


Power up the keypad. Enter Override Manager menu and press  until LCD displays:

OVR USERS  
MANAGEMENT


Press  and press  to scroll users list or enter user ID.

50	51	52	53	54
✓	x	_	_	✓

“✓” user installed, “\_” user deleted, “X” user disabled.

Press . If the user is not installed LCD displays:

52  
INSTALL?

“” Dallas key, “1 2” code, “+” dual mode, “TL” time lock

Press  to confirm or  to exit or for switching to the next user.



Enter the new user code and confirm it.

If the selected user is already installed, press  to choose whether to disable it, to delete it, selecting another user or exit. Press  to confirm the choice.

### Code changing


WARNING: it is recommended to always perform this operation with door open.

Power up the keypad.

Press , then press  until LCD displays:

CHANGE CODE

### Change code for standard and override Users

Power up the keypad. Access Change Code menu and press . LCD displays:

CHANGE USER  
CODE

Press  to confirm. LCD displays:

ENTER OLD CODE  
X X - X X X X X X

## TechMaster

Enter the **old code** e insert the Dallas key (if programmed).



Enter the **new code** e insert the Dallas key (if programmed).

Confirm the **new code** e insert the Dallas key (if programmed).

ENTER NEW CODE  
X X X X X

CONFIRM CODE  
X X X X X

### Change code for Manager

Power up the keypad. Access Change Code menu and press . Then, press  until LCD displays:

Press  to confirm. LCD displays:

Enter the **old code** e insert the Dallas key (if programmed).

Enter the **new code** e insert the Dallas key (if programmed).

Confirm the **new code** e insert the Dallas key (if programmed).



CHANGE MANAGER  
CODE

OLD CODE  
X X X X X

ENTER NEW CODE  
X X X X X

CONFIRM CODE  
X X X X X

### Change code for Override Manager

Power up the keypad. Access Change Code menu and press . Then, press  until LCD displays:

Press  to confirm. LCD displays:

Enter the **old code** e insert the Dallas key (if programmed).

Enter the **new code** e insert the Dallas key (if programmed).

Confirm the **new code** e insert the Dallas key (if programmed).



CHANGE OVR  
MANAGER CODE

OLD CODE  
X X X X X

ENTER NEW CODE  
X X X X X

CONFIRM CODE  
X X X X X

### Change code for Master

Power up the keypad. Access Change Code menu and press . Then, press  until LCD displays:

Press  to confirm. LCD displays:

Enter the **old code**.

Enter the **new code**.

Confirm the **new code**.

CHANGE MASTER  
CODE

OLD CODE  
X X X X X

ENTER NEW CODE  
X X X X X

CONFIRM CODE  
X X X X X

## Time menu

Power up the keypad.

Press  and then press  until LCD displays:

TIME MENU

### Opening extension


WARNING: before using this function, at least one time lock must be programmed.

Power up the keypad. Access Time Menu and press . LCD displays:

MANAGER CODE  
X X – X X X X X X


Enter Manager code. LCD displays:

OPENING  
EXTENSION


Press . If a time lock is already programmed, LCD displays the next activation time for the time lock (automatically calculated adding 30 minutes to the last activation time):

OPEN LOCK UNTIL:  
12/09 20:30

Press  to confirm.

It is also possible to enter different values. Enter date and time (max. 2h) and press  to confirm.


### Immediate Time Lock

Power up the keypad and access Time Menu and press . LCD displays:


MANAGER CODE  
X X – X X X X X X

Enter Manager code. LCD displays:

OPENING  
EXTENSION


Press  until LCD displays:

IMMEDIATE  
TIME LOCK

Press . LCD displays the next activation time for the time lock:

BLOCK UNTIL:  
14/09 08:00

Press  to confirm.

It is also possible to enter different values. Enter date and time (max. 2 weeks) and press  to confirm.

## Configuration menu

Power up the keypad.

Press  and then press  until LCD displays:

CONFIGURATION  
X X X X X X


Enter configuration code (default code 50-50-50).

### Install Locks

## TechMaster

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL  
LOCKS

Press  and select the lock to install.

SELECT  
LOCK

If the lock selected is already installed, LCD displays:

LOCK ALREADY  
INSTALLED

If the lock selected is not connected with the keypad, LCD displays:

LOCK X  
DOES NOT  
ANSWER

If the lock selected is instead connected with the keypad (but not installed), LCD displays:

MASTER CODE  
X X X X X X X

Enter Master code and then Manager code. LCD displays:


OPERATION DONE

### Remove Locks


**WARNING:** it is recommended to perform this operation always with lock open and connected with the keypad.

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL  
LOCKS

Press  until LCD displays:

REMOVE  
LOCKS

Press  and select the lock to remove.

SELECT  
LOCK

If the lock selected is connected with the keypad, LCD displays:

REMOVE LOCK X?

Press  to confirm. LCD displays:

MASTER CODE  
X X X X X X X

Enter Master code, LCD displays:

OPERATION DONE

If the lock selected is not installed, LCD displays:

LOCK NOT  
INSTALLED

If the lock selected is not connected with the keypad, LCD displays:

LOCK X  
DOES NOT  
ANSWER

Later, LCD displays:

CONTINUE?

Press  to confirm. LCD displays:

OPERATION DONE

### Lock reclosure mode


**WARNING:** this option is only available for motorized locks. To enable it, lock must be open.

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL  
LOCKS

## User instructions

## TechMaster

Press  until the LCD displays:


LOCK RECLOSURE  
MODE

Press . LCD displays:

MODE:  
AUTOMATIC

Press  to select between *AUTOMATIC* and *MANUAL* mode.

Press  to confirm.

With *MANUAL*, lock can be closed by pressing and holding  for 2 seconds.


With *AUTOMATIC* instead, lock automatically re-closes after the time set with Setup software.

### Install I/O interface

**WARNING:** I/O interface must be in pre-setup mode before the installation. For further information regarding the I/O interface reset see the user manual II\_T9355\_IP\_XX\_eng. Furthermore, the lock with ID: 1 must be open.

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL  
LOCKS

Press  until the LCD displays:

INSTALL  
I/O INTERF.

Press . LCD displays:

MASTER CODE  
X X X X X X X


Enter Master code. LCD displays:

OPERATION  
DONE

### Configure I/O Interface

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL  
LOCKS

Press  until the LCD displays:

CONFIGURE I/O  
INTERFACE

Press . LCD displays:

RS485 ID 01

Press  to confirm. LCD displays:

MASTER CODE  
X X X X X X X

Enter Master code. LCD displays:

RS485 ID XX

Enter an ID RS485 and press  to confirm. LCD displays:

OPERATION DONE


### Remove I/O Interface

Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL  
LOCKS



## TechMaster

Press  until the LCD displays:

REMOVEE I/O  
INTERFACE

Press  to confirm. LCD displays:

MASTER CODE  
X X X X X X X X

Enter Master code. LCD displays:

OPERATION DONE

If Dynamic codes have been activated, along with the deletion of all static codes (including the Master code), it is possible to directly access the menus I/O interface configuration and I/O interface removal by entering a dynamic code for the user I/O CONFIGURATION USER.

For further information, see the paragraph **Dynamic codes activation with static codes deleting**, page 18.

### Display contrast

Power up the keypad. Access Configuration Menu. LCD displays:


INSTALL  
LOCKS

Press  until the LCD displays:


DISPLAY  
CONTRAST

Press . LCD displays:

ADJUST  
CONTRAST  
X

Enter a contrast level (between 1 and 9) and press  to confirm. LCD displays:


OPERATION DONE


If Dynamic codes have been activated, along with the deletion of all static codes (including the Master code), it is possible to access the Display contrast menu by pressing and holding .

For further information, see the paragraph **Dynamic codes activation with static codes deleting**, page 18.

### Temporary restoring of the display contrast

This option can only be accessed after activating the dynamic codes without deletion of the static codes.

Power up the LCD. Press and hold  until the LCD displays the keypad firmware version.

Keep pressed  for 3s: LCD contrast level is automatically set to "3" regardless the last contrast value set and it remains at "3" until the LCD is kept ON.


### Keypad Language

Power up the keypad. Access Configuration Menu. LCD displays:


INSTALL  
LOCKS

## User instructions



## TechMaster

Press  until the LCD displays:

LANGUAGE

Press . LCD displays the current language set up:


LANGUAGE  
ENGLISH

Press  to change the language and press  to confirm.

### Membrane test

Power up the keypad. Access Configuration Menu. LCD displays:



INSTALL  
LOCKS

Press  until the LCD displays:

MEMBRANE TEST

Press . LCD displays:

MEMBRANE TEST  
1234567890 → ✓



Press  to change the language and press  to confirm.

Enter the sequence of buttons shown on the LCD.

Any working button produces a short beep.

A damaged button produces a long beep and LCD displays:

WRONG/FAULTY  
KEY

Press  to change the language and press  to confirm.


Two short beeps are produced if the test is completed successfully.  
LCD displays:

OPERATION  
DONE



### System Info


Power up the keypad. Access Configuration Menu. LCD displays:

INSTALL  
LOCKS

Press  until the LCD displays:

SYSTEM INFO

Press . LCD displays keypad system information. Press  to see lock system info.


Press  to see the current time and date.

### Dynamic keypad ID and DyamaWeb software license


These options can only be used after activating the dynamic codes. For further information see the paragraph **Dynamic codes activation with static codes deleting**, page 18. If dynamic codes have been activated, along with the deletion of all the static codes (including the Master code):

Power up the LCD. Press and hold  until LCD displays the keypad firmware version.

## TechMaster


Press  once: LCD displays the ID of the keypad in which dynamic codes have been activated.

OTC ID  
XXXXXXXX

Press  a second time: LCD displays the license number of DyamaWeb software version that manages the dynamic codes of the keypad and related locks.

DYAMAWEB  
XXXXXX

Press  to exit.

If Dynamic codes have been activated without deletion of the static codes, it is possible to retrieve the information by accessing the Configuration menu, selecting System info option and pressing .

Press  to exit.

**Correct disposal of this product:**

**(Waste Electrical & Electronic Equipment)**

Applicable in the European Union and other European countries with separate collection systems.



This marking displayed on the product or its literature indicates that it should not be disposed with other wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

**Contacts**

**GLOBAL HEADQUARTERS**

**Tecnosicurezza Spa**

Via Cesare Battisti, 276  
37057 San Giovanni Lupatoto  
Verona  
Tel.+39 045 826 64 70  
Fax. +39 045 826 64 69  
[info@tecnosicurezza.it](mailto:info@tecnosicurezza.it)  
[service@tecnosicurezza.it](mailto:service@tecnosicurezza.it)  
[infotecnosicurezza@pec.it](mailto:infotecnosicurezza@pec.it)

**USA HEADQUARTERS**

**Tecnosicurezza Inc.**

133, Trade Street- Suite 4  
Lexington, KY 40511  
Tel.+1 859 682 50 25  
[info.usa@tecnosicurezza.it](mailto:info.usa@tecnosicurezza.it)

**SPAIN HEADQUARTERS**

**Tecnosicurezza Sa**

C/Menor, 4 - Nave 10  
Pol. Ind La Mina  
28770 Colmenar Viejo  
SPAIN  
Tel.+34 91 804 33 91  
Fax.+34 91 804 32 63  
[info.es@tecnosicurezza.it](mailto:info.es@tecnosicurezza.it)